


DETAILS

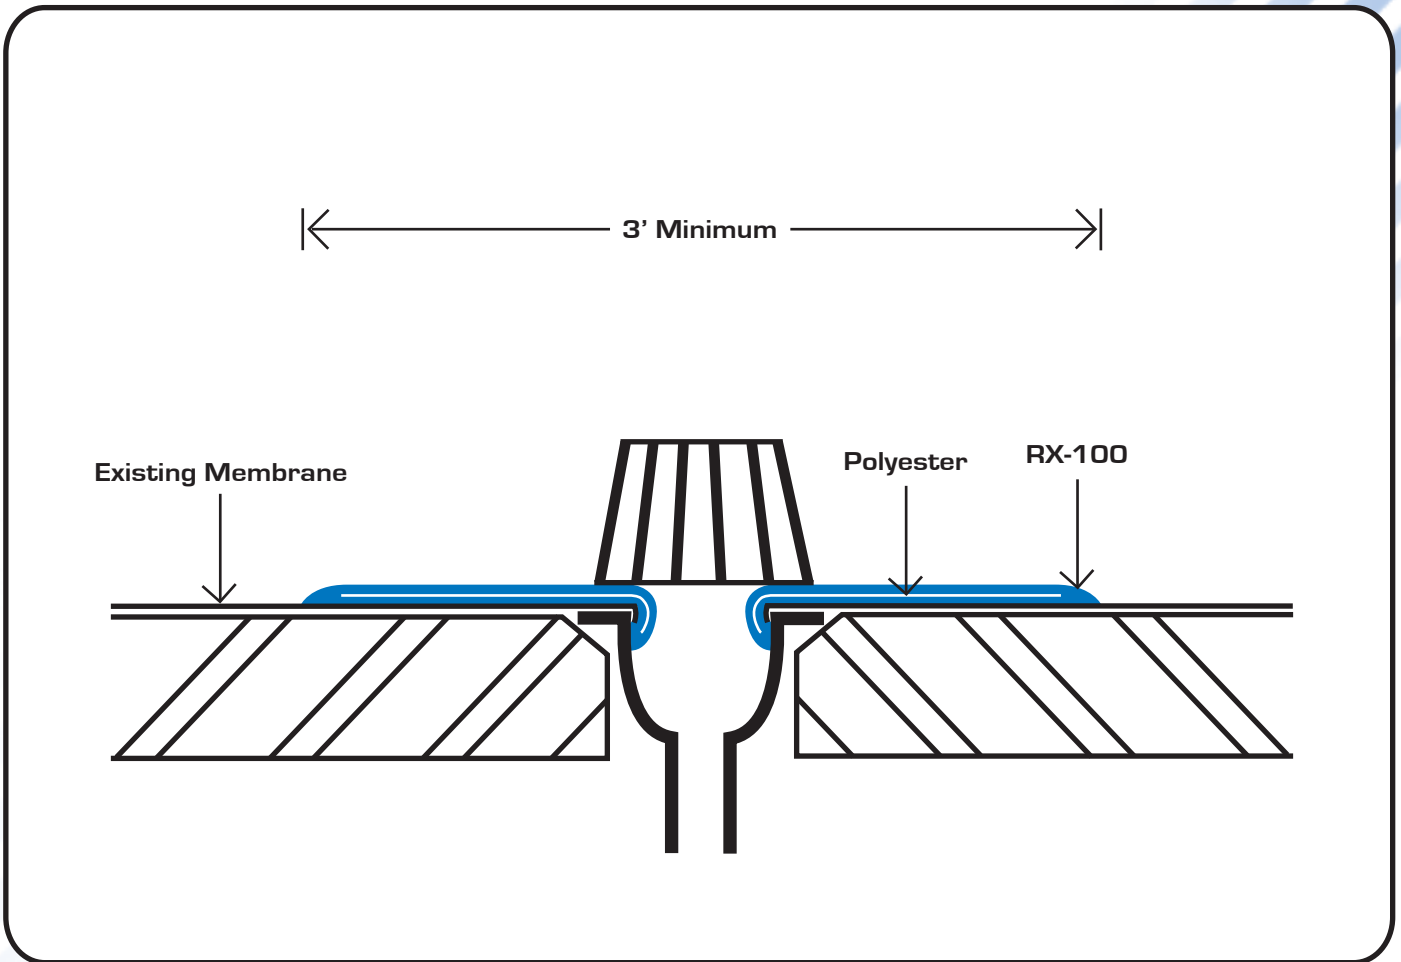

Drain

BUR 4

NOTE:

- Spud gravel a minimum of 4' square before reflashing drain.
- Remove strainer.
- Remove drain ring.
- Re-tap and/or replace broken drain bolts.
- Apply ASTM D-41 asphalt primer at the rate of 1 gal/sq.
- Run RX-100 and polyester down into drain bowl.
- Re-install drain clamping ring after flashing drain.