


DETAILS

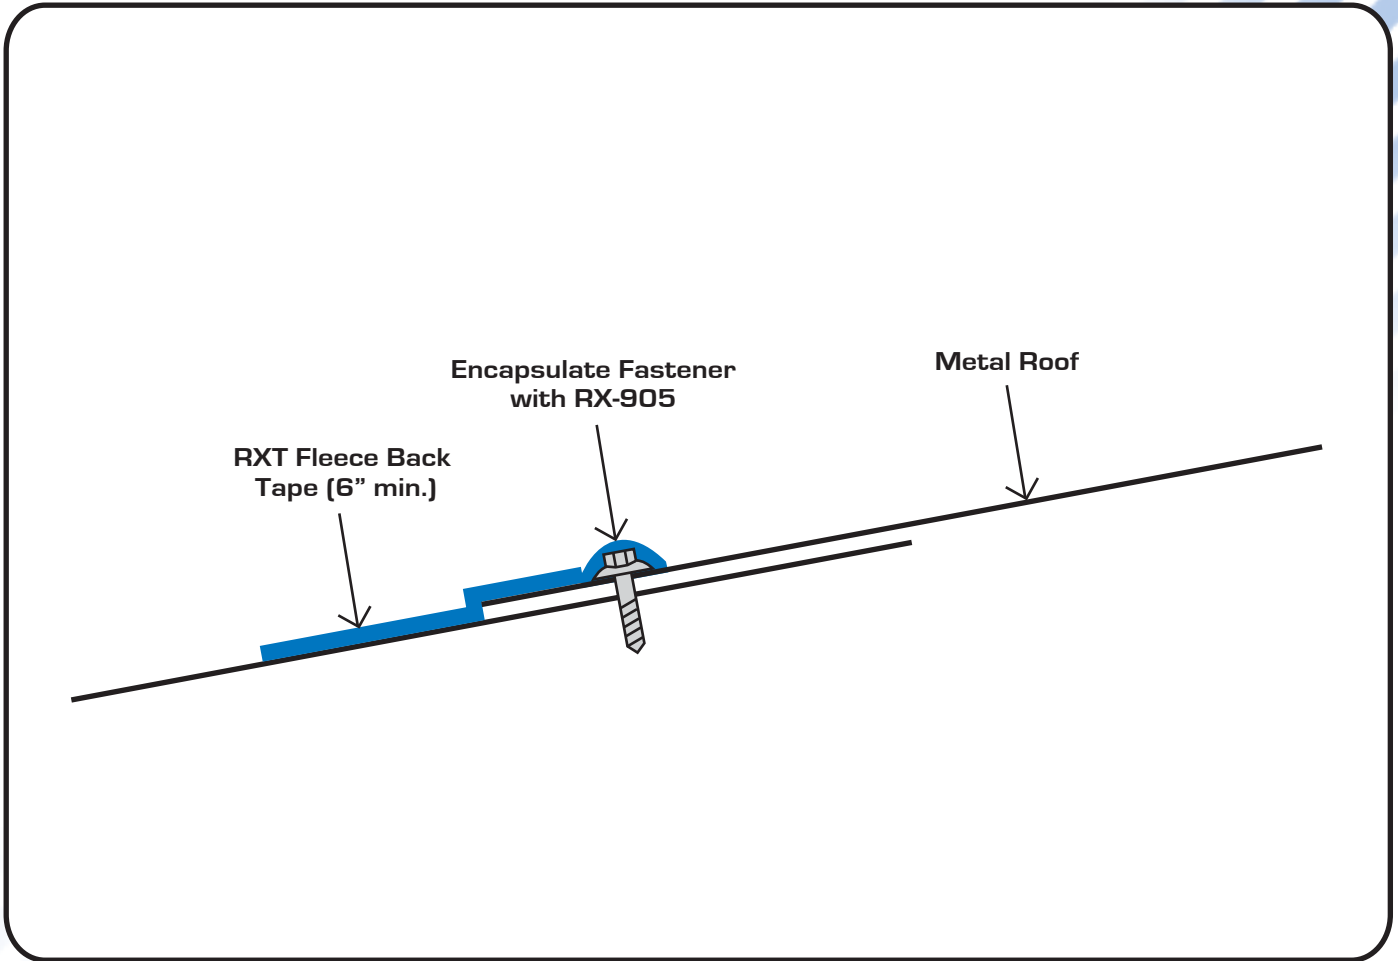

Horizontal Seam with Tape

Metal 1

NOTE:

- Cut out around fastner heads to eliminate "tenting".