


DETAILS

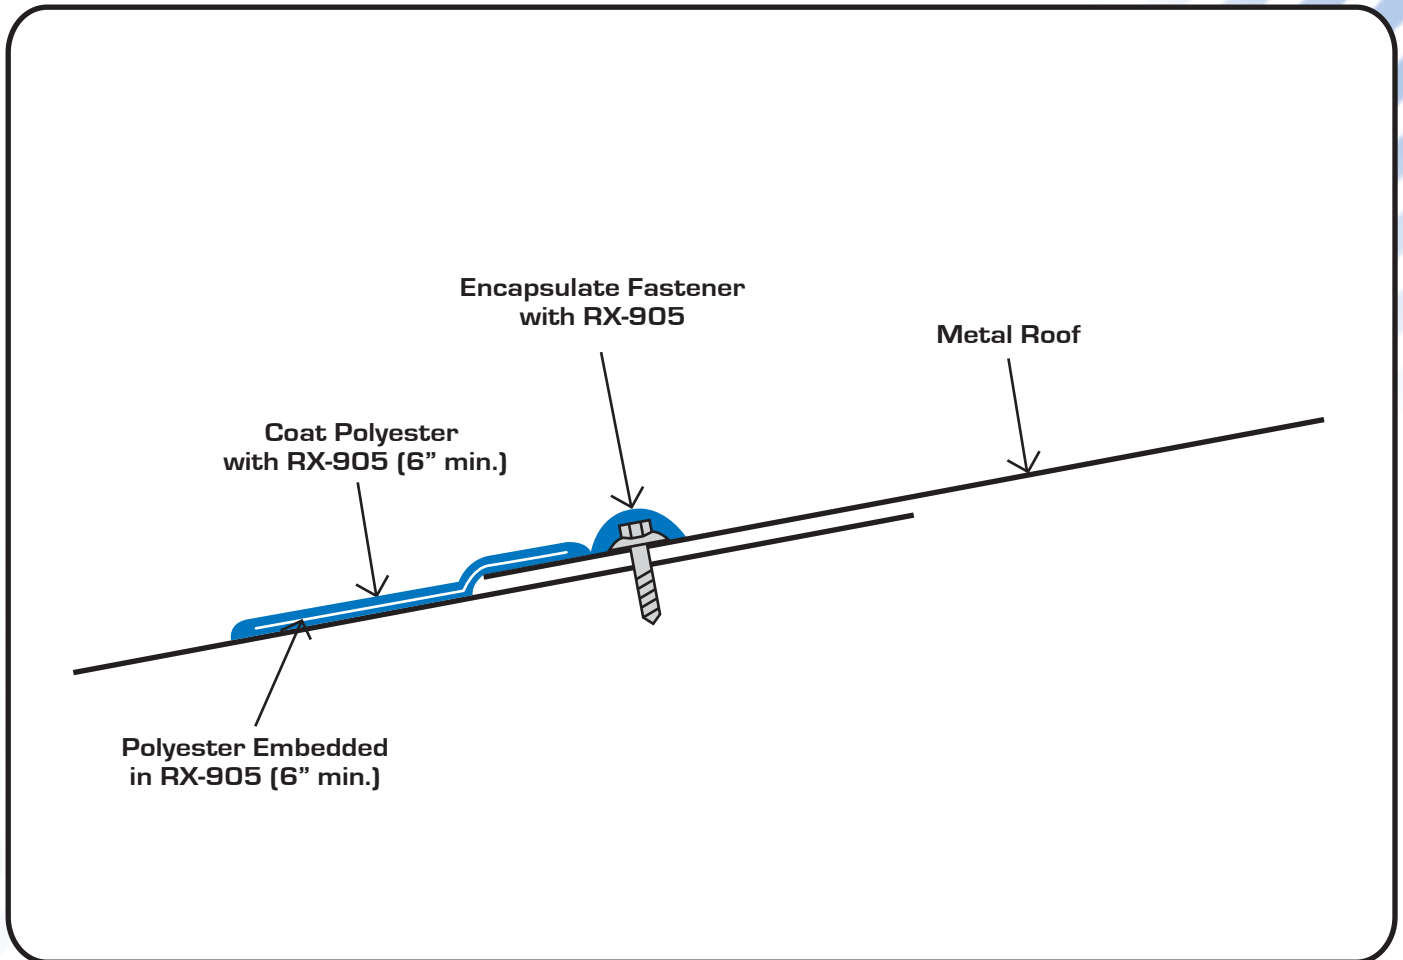

Horizontal Seam for RX-905

Metal 2

NOTE:

- Cut out around fastener heads to eliminate "tenting".
- Totally encapsulate all cut out fasteners with RX-905 AFTER installation of polyester.