


DETAILS

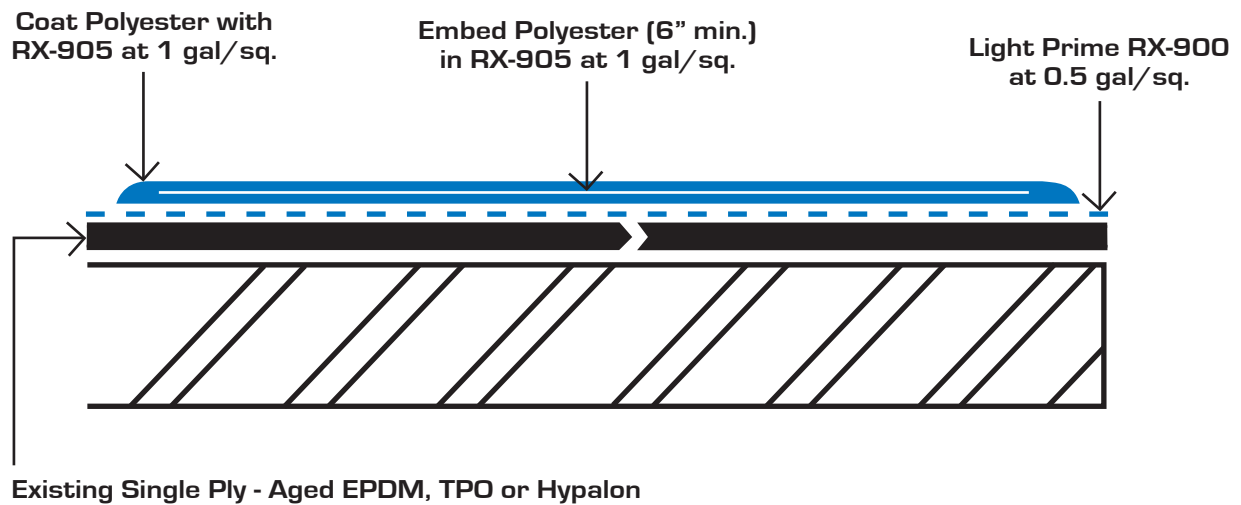

Single Ply Repair of Cut or Tear

Single Ply 1

OPTIONAL:

1. Apply RX Fleece Back repair tape to cleaned surface
2. Coat tape with RX-905 or RX-900 at 1 gal/sq