


**DETAILS**

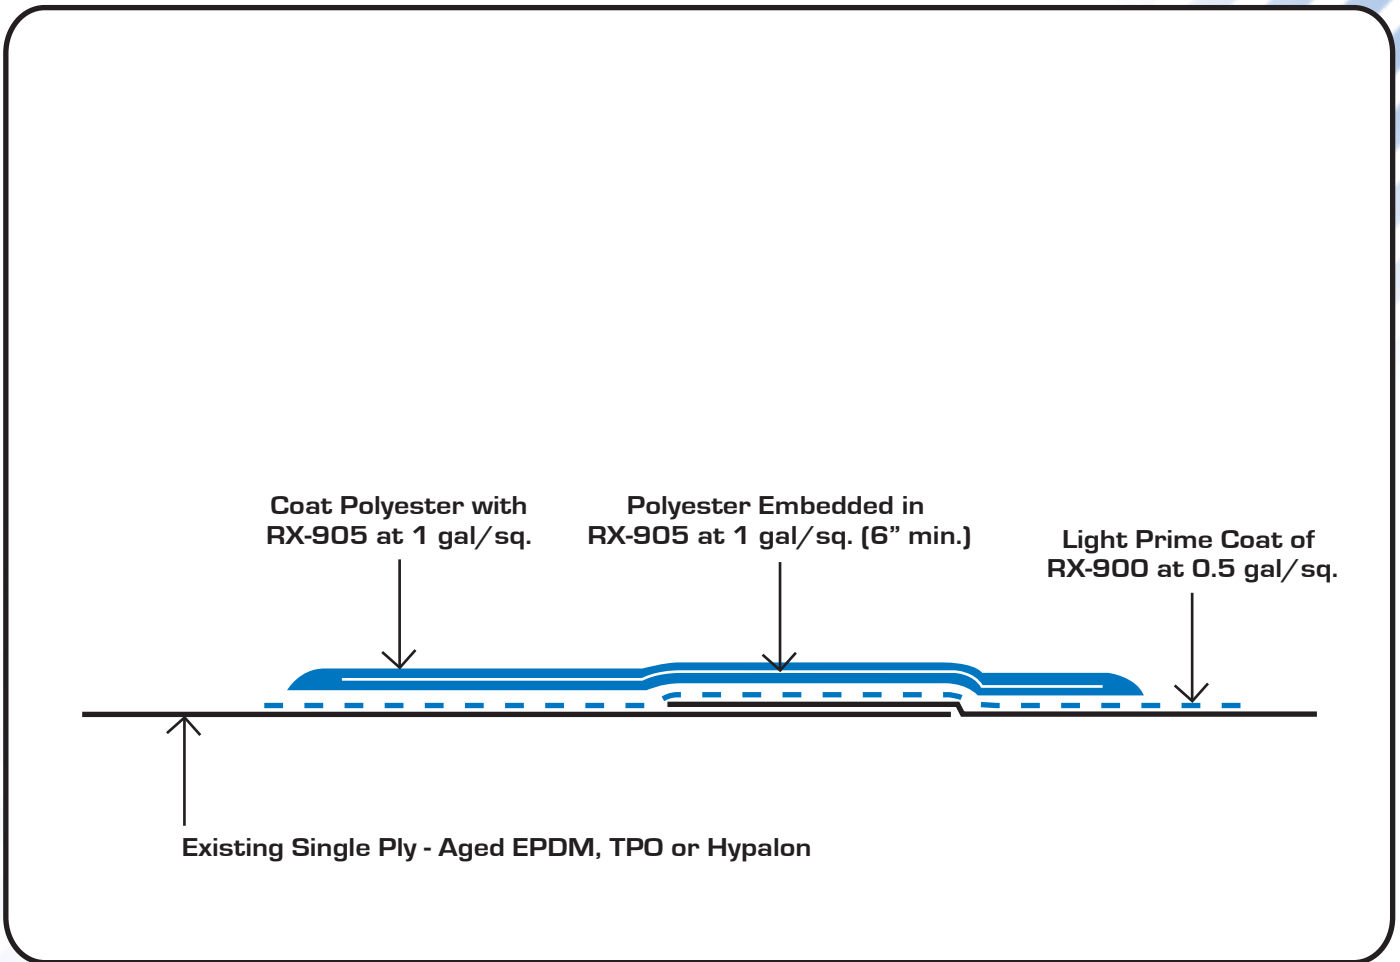

Seam Repair

Single Ply 2

**OPTIONAL:**

1. Apply RX Fleece Back repair tape to cleaned surface
2. Coat tape with RX-905 or RX-900 at 1 gal/sq